

FIG. 1

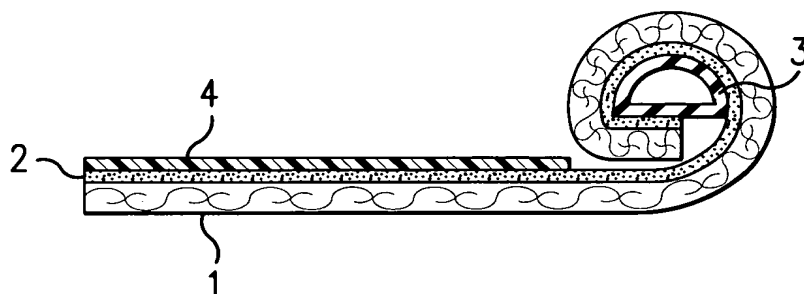


FIG. 2

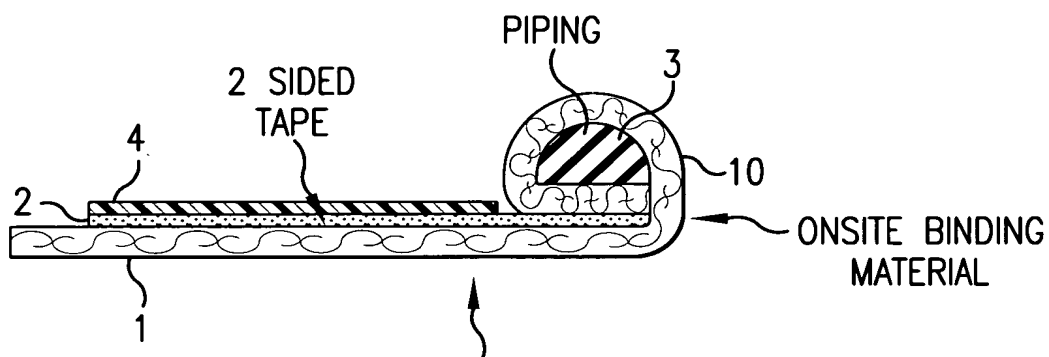


FIG. 3


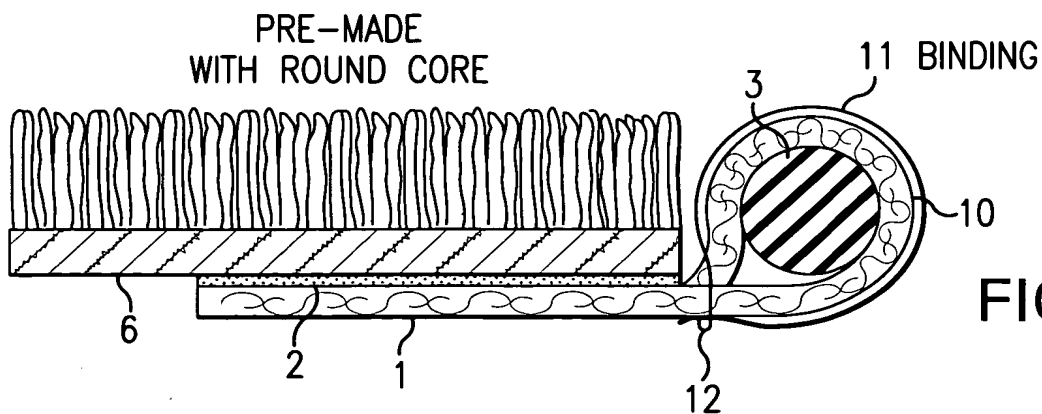



FIG. 4

METHOD OF APPLICATION

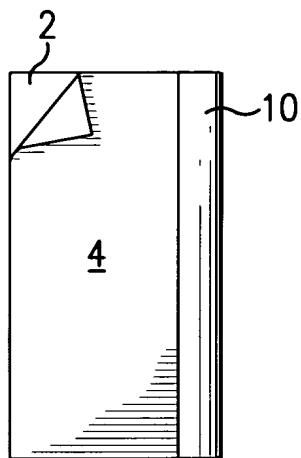


STEP1: PEEL WAX PAPER
TO EXPOSE GLUED SIDE
OF BINDER.

FIG.5

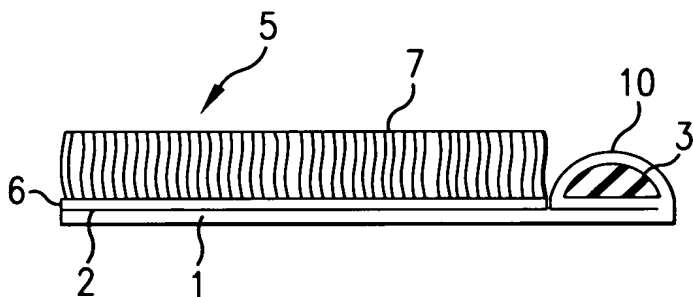


STEP2: ATTACH TO BOTTOM OF
CARPET AND ABUT CORD
TO SIDE OF CARPET.

FIG.6

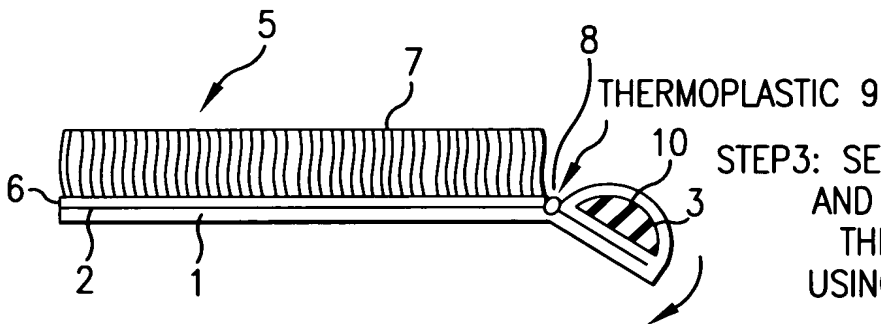

STEP3: SEPARATE CORD FROM EDGE
AND APPLY A BEAD OF
THERMOPLASTIC GLUE
USING A HOT GLUE GUN.

FIG.7

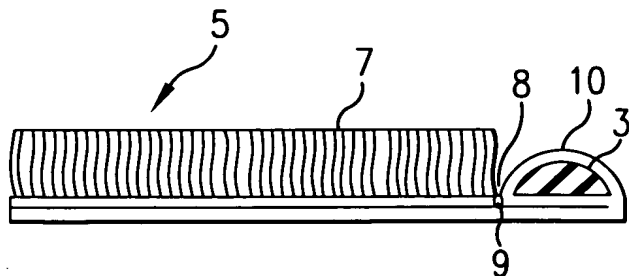

STEP4: ATTACH EDGE BINDING
TO EDGE OF CARPET BY FOLDING
THEM TOGETHER TO FORM
A SEALED BOND.

FIG.8